


About the Module

Use this illustration to identify the external features of the module.

Front View of 1757-SRM Module with Door Open

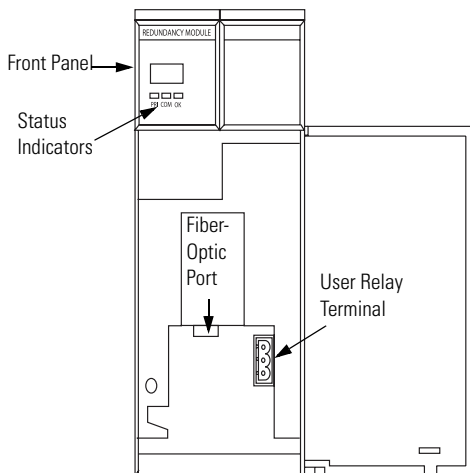

Before You Begin

Before you install the module, make sure you:

- know how to handle the module.

See Prevent Electrostatic Discharge on page 5.

- understand redundant systems and redundant media.

For additional information, see the ControlLogix Redundancy System User Manual, publication [1756-UM523](#).


IMPORTANT

If you are using a ProcessLogix system, search for the appropriate Knowledge Builder documentation at:
<http://www.rockwellautomation.com/knowledgebase>.

Parts List

You will need these components.

1756-A4, 1756-A7, 1756-A10,
1756-A13, or 1756-A17 Chassis

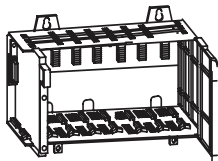

1757-SRM
Modules



1756-PA72, 1756-PA75,
1756-PB72, or 1756-PB75
Power Supplies




1757-SRCxxx
Fiber-optic Cable



Prepare the Chassis for Module Installation

Before you install the module, you must install and connect a ControlLogix chassis and power supply.

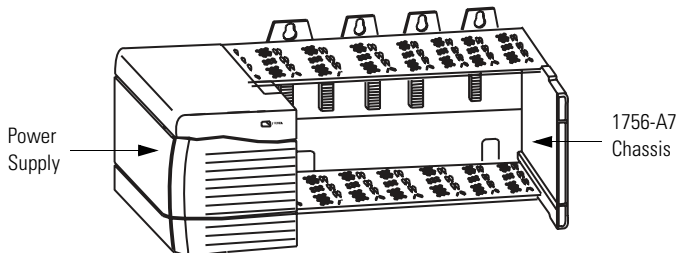

Chassis Type (series B)	Chassis Installation Instructions
1756-A4	Publication 1756-IN080
1756-A7	
1756-A10	
1756-A13	
1756-A17	